

Change over C mount to CS mount

The description can be used for following products:

- mvBlueCOGAR-P series
- mvBlueFOX series
- mvBlueLYNX series
- mvBlueLYNX-M series

You will need following utilities to change the mount:

- allen wrench, 0.9mm
- lens
- PC with installed driver

Step 1: Demounting of C mount ring nut

For demounting of the C mount ring nut, please

1. unfix the 3 set screws on the front plate with the aid of the 0.9mm allen wrench ((**1**) in figure 1). Afterwards
2. turn the C mount ring nut anti-clockwise from the front plate ((**2**) in figure 1).

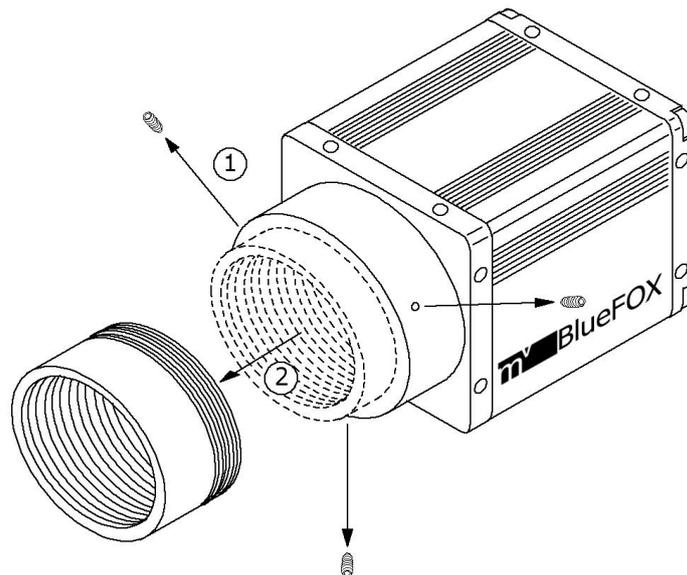


Figure 1 Demounting of the C mount ring nut

Step 2: Mounting CS mount-ring nut

1. Turn the CS mount ring nut clockwise into the front plate and
2. screw the set screws using the allen wrench but without fixing them.



The CS mount ring nut (12.52mm) is 5mm shorter than the C mount ring nut (17.52mm).

Step 3: Adjusting sharpness and fixing

In the last step, you have to adjust the right distance of the CS mount ring nut (thus the sharpness). Please follow these steps:

1. Mount a CS mount lens and
2. connect the camera to the PC with the installed driver.
3. Start the GUI tool "*wxPropView*" and
4. display a live image.
5. Now turn the ring nut with the mounted lens in or out until you get a sharp image.
6. Afterwards, fix the three set screws with the allen wrench.